

R-Series Programming RESTORE – WITH A MICRO-SD CARD

INSTALL THE MICRO-SD CARD IN THE R-Series Panel.



INSERT MICRO-SD WITH LABEL FACING UP.

FOLLOW THE MENU SELECTIONS

How to get here: SELECT PROGRAM ⇨ (5) SYSTEM SETUP ⇨

<pre>7 BACKUP/RESTORE</pre>		<p>Use UP/DOWN to highlight BACKUP/RESTORE. Push SELECT. Quick key: Push 7.</p>
<pre>1 BACKUP RESTORE</pre>		<p>Use UP/DOWN to highlight RESTORE. Push SELECT Quick key: Push 2.</p>
<pre>1 FROM USB 2 FROM MICROSD</pre>		<p>Use UP/DOWN to highlight FROM MICRO-SD. Push SELECT Quick key: Push 2. The backup file will come from the Micro-SD.</p>
<pre>01 - Filename 02 - 03 - 04 -</pre>		<p>Use UP/DOWN to highlight 'Filename'. Push SELECT Note: The 'filename' must be 8 characters or less in length.</p>
<pre>1 FROM USB 2 FROM MICROSD RESTORING</pre>		<p>THE RESTORE FILE 'Filename' UPLOAD WILL START.</p>

- Once "Restoring" disappears, the restore is complete. At this point, the Micro-SD card can be safely removed.
- Press and hold the panel reset button for 2 seconds and release.
- The panel will now follow the new program.